



### 3-5. Using the interior lights

## Interior lights list

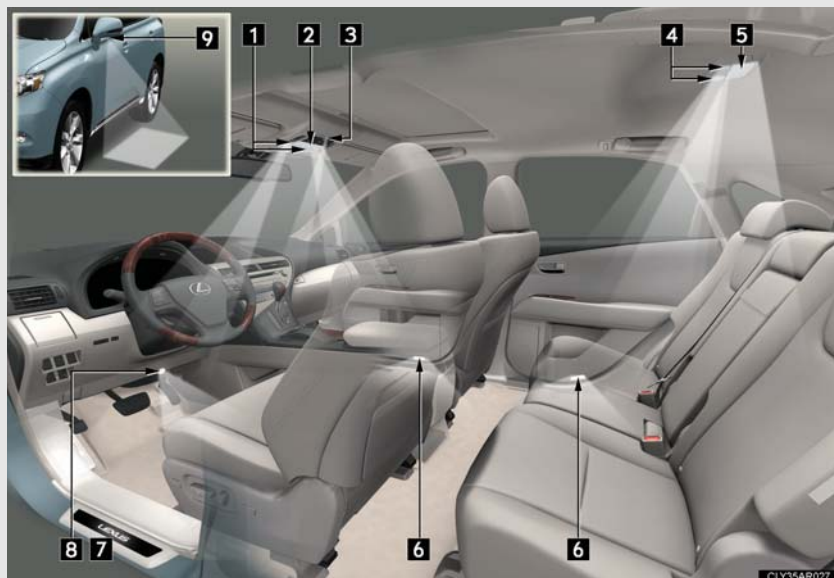

- 1 Front personal lights (→P. 401)
- 2 Front interior lights (→P. 401)
- 3 Shift lever light (when the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)
- 4 Rear personal lights (→ P. 401)
- 5 Rear interior light
- 6 Door courtesy lights
- 7 Scuff lights (if equipped)
- 8 Footwell lights
- 9 Outer foot lights


## Interior lights

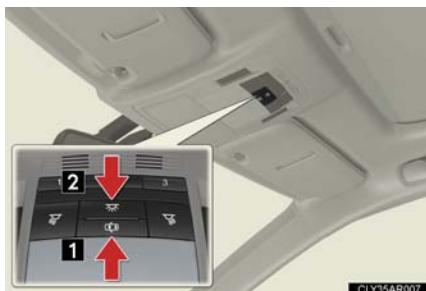

- 1 Turns the lights on/off linked to the door positions
- 2 Turns the lights on/off

## Personal lights

### ► Front

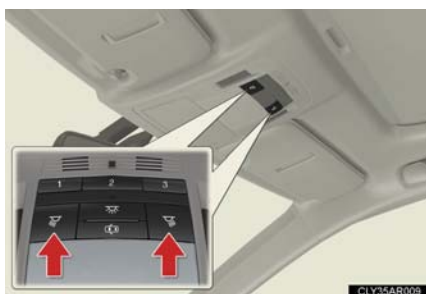

Turns the light on/off

### ► Rear



Turns the light on/off

---

### ■ Illuminated entry system

The lights automatically turn on/off according to "ENGINE START STOP" switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.

### ■ To prevent battery discharge

If the interior lights remain on when the door is not fully closed and the interior light switch (door position on/ off) is on, the lights will go off automatically after 20 minutes.

### ■ Customization

Settings (e.g. the time elapsed before the lights turn off) can be changed. (Customizable features →P. 625)